

User Guide

Thank you for purchasing a SKOPE refrigeration product.

Safety

Always observe safety precautions when using any electrical appliance. Read these instructions carefully and retain them for future reference.

WARNING

- Ensure the appliance is disconnected from the power supply before performing any cleaning or maintenance.
- Do not cover the grilles or block the entry or exhaust of airflow by placing objects up against the refrigeration unit.
- Should manual defrosting be necessary, turn off the refrigeration system and allow the ice to melt by air circulation. Collect ice and water during defrost to prevent a slip hazard. Do not use mechanical methods to remove ice, as this may damage the refrigeration circuit.
- Do not use any electrical devices or appliances inside the food storage compartment.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use this appliance for other than its intended use.
- Do not insert fingers/foreign objects into any holes.
- Only use this appliance with the voltage specified on the cabinet rating label.
- Ensure the appliance has adequate ventilation as this is essential to economical, high performance.
- Be careful not to touch moving parts and hot surfaces.
- For your own safety and that of others, ensure that all electrical work is done by authorised personnel.
- If the power supply flexible cord becomes damaged, it must be replaced by an authorised service agent or similarly qualified person in order to avoid a hazard.
- If installing or removing the refrigeration unit, refer to the Installation Guidelines below, and observe all necessary safety precautions.
- The appliance is not designed to be stable while in motion. Use extreme caution when moving or transporting it.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- If the cabinet is to be scrapped, ensure the cabinet is unplugged from the power supply and cut off the mains flex close to the back of the cabinet. Be mindful of the risk of animals or children becoming trapped in the appliance – either remove or secure doors if necessary.
- Refrigerant must be removed by a qualified service person and the cabinet recycled/disposed of in accordance with local regulations.

This cabinet is designed to operate within a specific climatic class environment. The cabinet rating label inside the cabinet lists the climate class number.

Climate class	Ambient temperature	Relative humidity
3	25°C	60%
4	30°C	55%
5	40°C	40%
7 (tropical)	35°C	75%

The cabinet includes relevant hazard symbols that may be associated with the chiller. Refer to the information below for symbol description.

**WARNING**

The refrigeration system contains flammable R600a refrigerant. Do not tamper with it. The refrigeration system must only be serviced by qualified personnel.

Service and Support

 
We know you will get years of satisfaction from your new SKOPE product when you follow a few simple preventative maintenance guidelines.

Helpful information is available on the SKOPE website: www.skope.com/serviceandsupport




Installation Guidelines

When installing this cabinet, make sure you consider and meet the installation guidelines below.

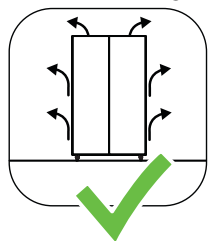


Ventilation

 Ensure all ventilation requirements below are met.

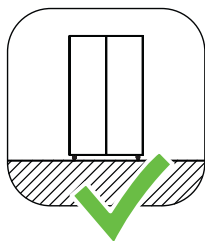


Surface

 Make sure the installation surface is capable of supporting the loaded cabinet.

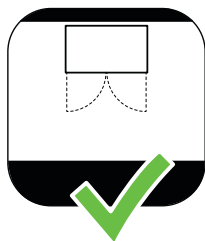


Door Opening

 Allow adequate space for the door to open and close properly.

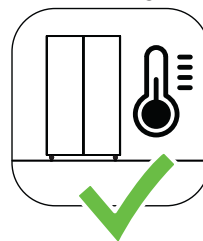


Climate Class

 Only install the fridge in an environment within its climate class. The climate class is stated on the cabinet rating label.

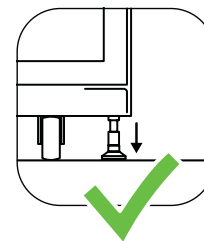


Stabiliser Feet

 To provide adequate stability, you **must** screw down the stabiliser feet (located under the door) anti-clockwise until they are firmly in contact with the floor.

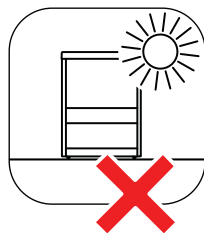


Sunlight

 Do not install the cabinet in direct sunlight.

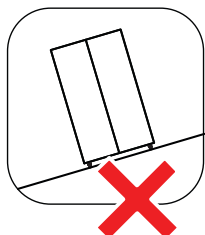


Uneven Surface

 Do not install the cabinet on an uneven surface.

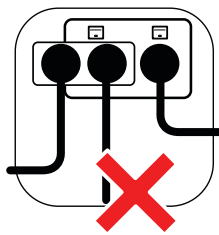


Power Supply

 Do not overload the power supply.

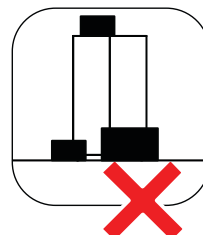


Blocking Ventilation

 Do not store boxes or items in front or on top of the cabinet.

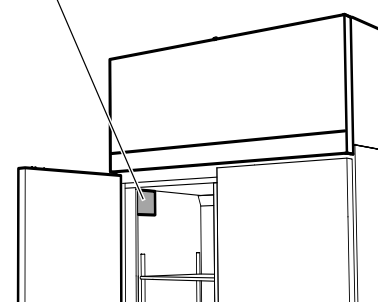

Ventilation Requirements

 You must ensure the cabinet has the following ventilation clearances at all times:

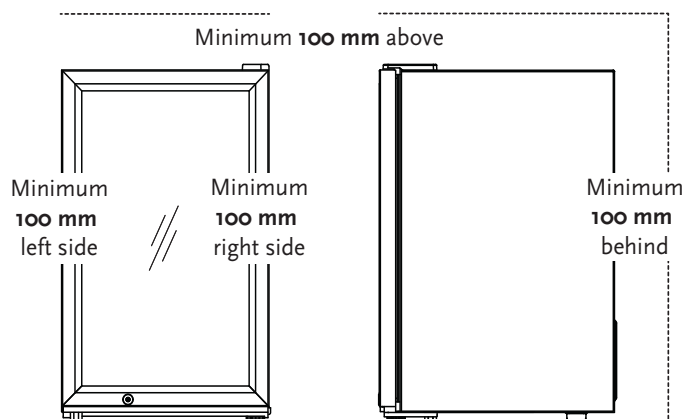

Shelves

The cabinet is supplied with 2 shelves.

Remove the packaging, then position the shelves at the required height. The shelves have hooks on the back which lock them in position.



Shelf hook

 
Operation

Let the cabinet stand for:

- at least 30 minutes before connecting to the power supply for the first time.
- 10 minutes if it has been disconnected from the power supply for any reason.

Loading Product

Let the cabinet run for 30 minutes before loading it with product for the first time. When loading the shelves with product:

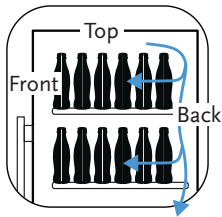

Internal Airflow

Leave 25 mm space between product and the back of cabinet interior, and do not block the drain hole.



Shelf Loading

Do not overload the shelves.



Shelf Flexing

Remove product if the shelf is flexing.



Shelf Overhang

Do not let product overhang the shelves.

Refrigeration System

The evaporator fan (located inside the cabinet) should operate continuously from the time the cabinet is plugged in. You can verify this by checking that the air is moving inside the cabinet.

While the fridge is operating it is normal to hear gurgling sounds caused by the flow of refrigerant when each cooling cycle ends.

 
The thermostat will click when the refrigeration system switches on and off.

Temperature

The temperature of the fridge is regulated by a thermostat located on the inside back wall of the cabinet. The temperature is set at the factory and should not require adjusting. The normal temperature controller setting is 2.


If required, turn the knob:

- clockwise to lower the temperature. Be careful not to set it too low, or product could freeze.
- anti-clockwise to raise the temperature.
- to 0 to switch the refrigeration system off. The fan and lights will stay on.

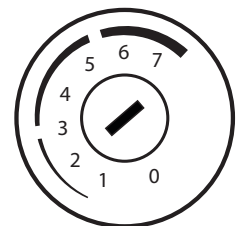

Lights

 You can turn the light on and off using the switch on the right hand side of the LED strip on the ceiling of the cabinet.

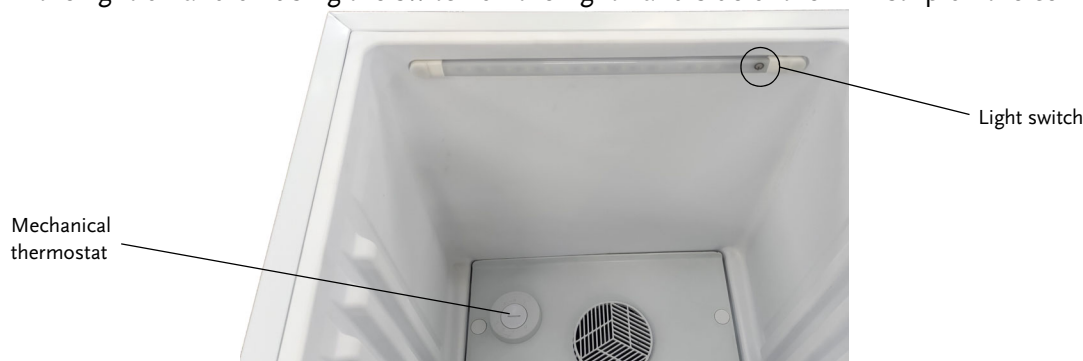

Cleaning

Always unplug the cabinet from the mains power supply before cleaning.

Cabinet

- Wipe the inside and outside of the cabinet with a damp cloth and a small amount of detergent, taking care to keep moisture away from electrical parts.
 - Do not use abrasive or corrosive cleaners or boiling water.
 - Do not flush the cabinet with water.
- Check that the condensation drain hole at the base of the lower inside rear wall panel on the left hand side is not blocked.
- Clean the door gasket with a damp cloth and a small amount of detergent every three months.

