 


TRIO[®] *Plancher*

 
FLOOR STEAM MOP

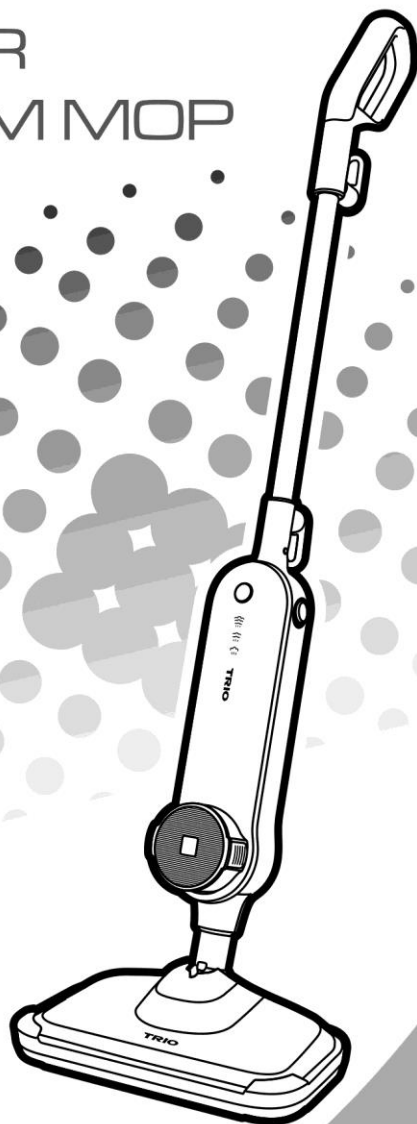

USER MANUAL

TFSM-521

Parts Identification

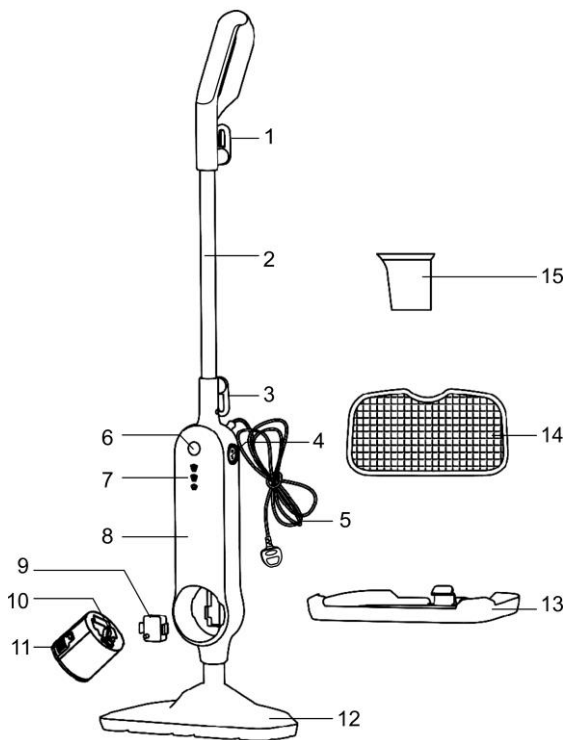

1.	Cord hook	9.	Filter
2.	Mental tube	10.	Water inlet
3.	Cord Hook	11.	330ml water tank
4.	Power switch	12.	Mop head
5.	Power cord	13.	Carpet glider
6.	Steam control button	14.	Mop pad x2pcs
7.	Steam level indicator	15.	Water cup
8.	Lower body		

Specifications

Model	TFSM-521
Rated Voltage	220-240V~
Rated Wattage	1300W
Frequency	50-60Hz
Capacity OF Water Tank	330ml

General Safety Precautions

1. Read all instructions carefully. Keep instructions booklet for future reference.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience & knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Do not direct steam at people, animals, or at electrical outlets.
4. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
5. Do not leave steam cleaner unattended.
6. Do not expose hair, loose clothing, fingers or body parts to openings or moving parts of the steam mop.
7. Do not handle steam cleaner with wet hands.
8. Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water.
9. Do not pull or carry by cord, use cord as a handle, pull cord around sharp corners or edges, or expose cord to heated surfaces.
10. Unplug by grasping the plug, not the cord.

11. Do not use appliance in an enclosed space filled with vapor given off by oil- based paint, paint thinner, some moth proofing sub-stances, flammable dust, or other explosive or toxic vapors.
12. Do not use the steam mop as a toy.
13. Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
14. Do not immerse the steam mop.
15. Do not use it for space heating.
16. Do not use for any purpose other than described in this User's Guide.
17. Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
18. Never put descaling, aromatic, alcoholic or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.
19. Close attention is necessary when used by or near children.
20. This appliance is intended for household use only.

How to use the Steam Mop

Assembly

Your steam mop assembly will be quick and easy by 3 steps. It is packaged with the following items:


1. Handle




2. Lower Body




3. Mop Head

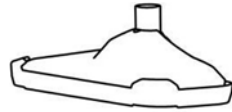

4. 330ml water tank

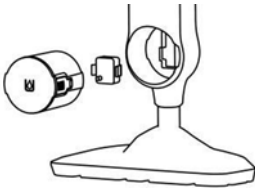

5. Mop pad

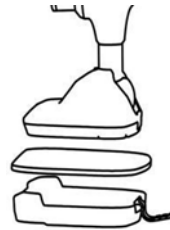

Assembly steps:

1. Attach lower body to mop head by snapping it into place.
2. Install the metal tube into the lower body until it locks into the right place.
3. Install the water tank into the lower body. Steam mop assembly is now complete.

❖ 330mL Removable water tank

The water tank is located on the bottom of the lower body. Distilled or demineralized water is recommended instead of tap water; otherwise, lime scale will form.




Note: Please turn off the steam cleaner when removing the water tank. Fill the water tank with water cup. Do not use chemicals in the water tank of your steam cleaner. It is recommended to descale at least once a month.

Operations

❖ Steam Levels Control

Steam control indicator light will stop blinking when steam mop is ready to use. Then press the steam level button to choose the level of steam you desire.

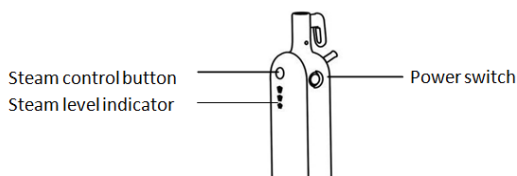


Note:

Press the power switch first and then press the steam control button. Please note that when you first press the steam level button, the steam is at its maximum level. Please adjust your desired level by pressing the steam control button.

❖ Reusable Microfiber Mop Pads


Reusable microfiber mop pads are **machine washable** and safe for virtually all hard floor surfaces. Your steam mop may have come with two pads. The gray and white striped pads can be used for scrubbing heavily soiled floors and cleaning tougher messes.

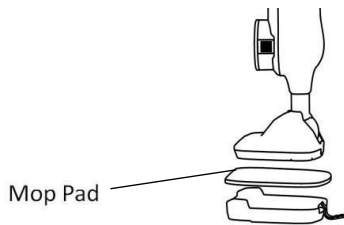

Getting ready

1. Attach the mop pad to the mop head, making sure quick-grip release tab is located on the back.
2. Fill the water tank
 - a) Press the buttons on both sides of the tank and pull it out.
 - b) Pull out the rubber plug on the back of the tank.
 - c) Fill water tank with water and plug the rubber plug back. For best results, water should be at room temperature.
 - d) Place the water tank back to the lower body and gently slide it into place.
3. Quickly release the power cord and insert it into the power socket.
4. The indicator will light up when the steam mop is ready to use. Press the steam level button to select the steam level you want.

NOTE: Upon first use of the steam mop or first use after refilling the water tank, the pump may make a “knocking” sound. This is normal and should only last a few seconds.

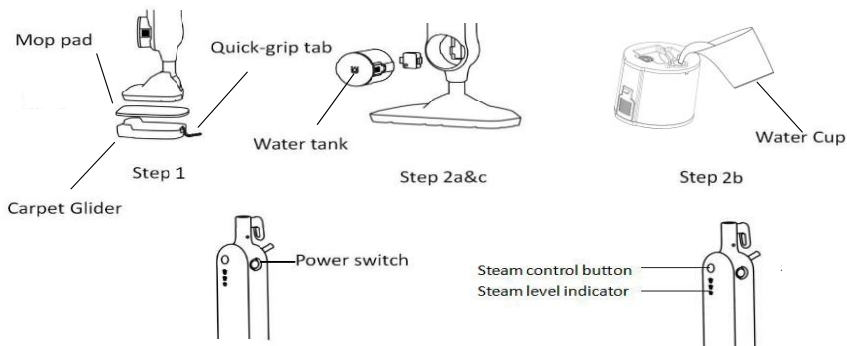


Before you clean

Thoroughly sweep or vacuum floor prior to cleaning with the steam mop.

Cleaning hard floors

Your steam mop is designed to clean hard flooring such as ceramic tile, vinyl, and laminate, marble, stone and sealed hard wood floors. Use of your steam mop on waxed or some un-waxed floors may result in a diminished glossiness. The steam mop is not for inconspicuous area and checks the care instructions from your flooring manufacturer.

1. Plug the unit in and wait 30 seconds for it to heat up. Choose the level of steam to clean your floor: Low (delicate floors), Medium (regular cleaning) and High (durable floors or sticky messes). Begin cleaning by slowly passing the unit over the floor surface.

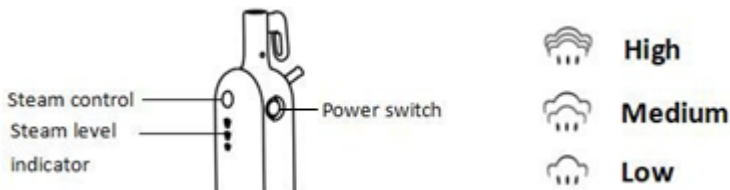

Note: Press power switch before you press steam control button. When you first press the steam level button, the steam is at its maximum level. Please adjust desired level by pressing the button.

2. To turn off the steam mop, continue to press the steam level button until the blue light is illuminated above the steam level button.
3. When the steam mop stops emitting steam, unplug the unit. Simply remove the water tank, refill and continue steaming.


Note: Be sure to disinfect the floor, use a microfiber mat and wipe it back and forth at least three times with continuous steam. For best results, remove the liner and clean it after.

❖ Carpet Glider

This accessory is used to attach to the steam mop head to allow the steam mop to slide over the carpet, thus cleaning the carpet.

Note: Please make sure that carpet glider has been buckled on the floor head. If it is not in the correct position, it will cause carpet glider to fall out during the use of the steam mop.

Move the steam mop in a continuous motion until you are finished. **DO NOT** leave the mop in a stationary position.

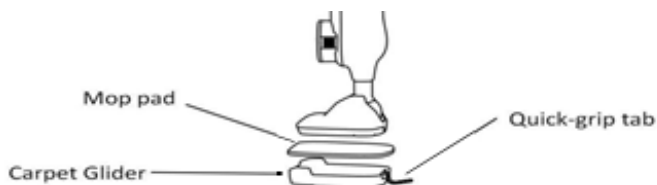

Care and Cleaning

1. Unplug power cord from outlet.
2. Carefully remove the mop pad from the mop head. The mop pad and lower assembly may be hot.
3. Any water remaining in the water tank should be emptied prior to machine storage.
4. Mop pad can be machine washed in warm water. Use only liquid detergents. Do not use fabric softeners or bleach for best results. Air dry the mops.
5. Wrap power cord around hook on back of the steam mop.
6. Wipe all surfaces of the steam mop with a soft cloth. Store upright in a protected, dry area.
7. It is recommended to remove lime scale in the water tank at least once a month and use a lime scale removing solution for steam cleaner.

Troubleshooting

Comment Issues

Problem	Possible reason	Reason
Reduced steam or no steam	Water tank empty	Turn off the cleaner and refill the water tank.
	Steam level not selected	Select steam level by pressing steam level button.
Water leakage	Loosen rubber plug	Turn off the cleaner and pull out the water tank. Plug the rubber plug tightly.
Hard to use on the carpet	Carpet glider not buckled	Make sure the carpet glider has been buckled on the floor head.
Water tank rusts	Didn't empty the tank	Any water remaining in the water tank should be emptied prior to machine storage.
Cannot control the steam level	Didn't turn on the cleaner	Press power switch beside of the lower body before you press steam control button.
Mop getting too wet	Wrong steam level	Adjust your steam to lower level.
Stop working	Improper operation or product problem	Contact After-sales service.

Troubleshooting

FAQ

Question	Answer
Are the cleaning pads reusable/washable?	Yes, our microfiber mop pads are machine washable. Please use only liquid detergents. Do not use fabric softeners or bleach for best results. Air dry the mops.
What floors can the steam mop use for?	Our steam mop is designed to clean hard flooring such as ceramic tile, vinyl, laminate, marble, stone and sealed hard wood floors. Use of your steam mop on waxed or some un-waxed floors may result in a diminished glossiness.
Do you need to pump the handle to release the steam or is it automatic?	Our steam mop will release steam automatically after you choose the steam level. You can choose the level of steam by pressing the steam level button to clean your floor: Low(delicate floors), Medium (regular cleaning) and High(durable floors or sticky messes).
Can you use a cleaning solution with this steam mop or should you only use water in it?	Our steam mop cannot use any cleaning solution. We recommend only using distilled water to increase the service life of mop.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

