 


TRIO[®] *Plancher*

WIRELESS



UV MITES KILLER

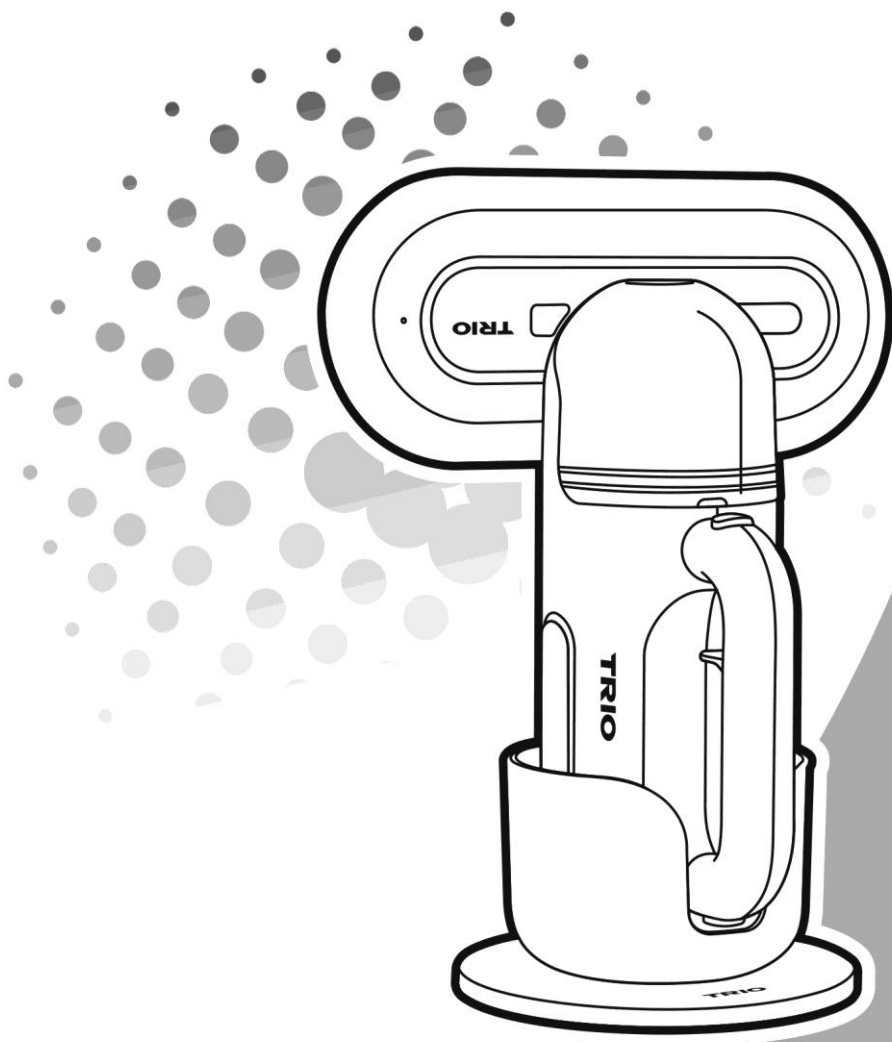

USER MANUAL

TMK-335

Parts Identification

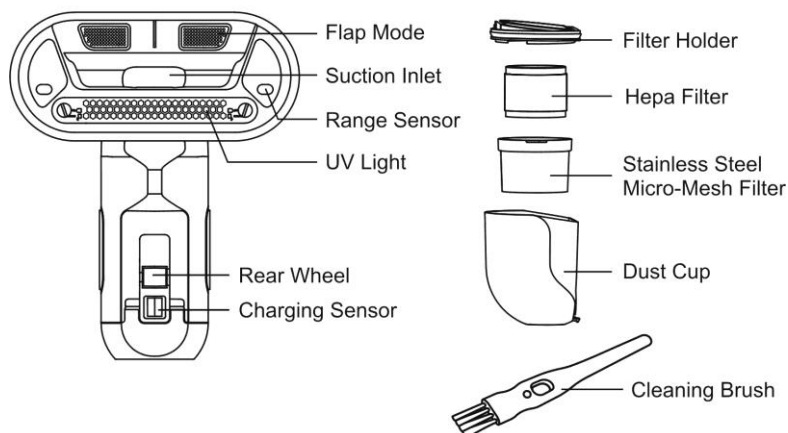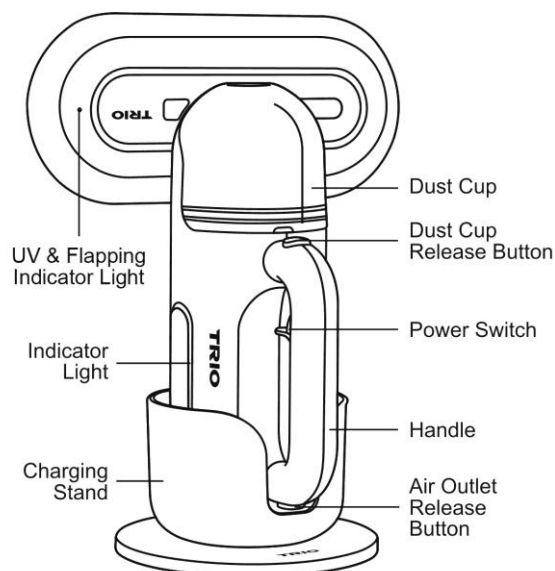

Specifications

Model	TMK-335
Rated Voltage	21.6V
Rated Power	100W
Charge Time	4.5 Hour
Input Adaptor Voltage	100-240V~50/60Hz 1A
Output Adaptor Voltage	DC 26V 1A
Working Time	≥25min
Battery Capacity	2200mAh

General Safety Precautions

- Read this instruction manual carefully before using the appliance for the first time. Keep this user manual for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Before using the appliance, check that the mains power voltage corresponds to the voltage shown on the rating label.
- Always remove the plug from the power socket when the appliance is not in use and before carrying out any cleaning or maintenance operations.
- Never use the cord to pull the plug and cord set from the mains power outlet. Hold the plug firmly to insert or remove it from the mains power supply.
- Always remove the plug from the power socket before opening the appliance.
- Never use spirits or other solvents to clean the appliance. Use a damp cloth.
- **Do not use the wireless UV mites killer to suck any liquids, oil, petrol and flammable objects like cigarettes.**

- Keep it away from high-temperature and any source of flame.
- Please keep the air flow and moving parts away from the hair, loose clothing, fingers and body parts. Don't point the air passage or tool to the eyes or ears.
- Please check the clean area before usage. If find big paper, paper balls, plastic cloth or sharp objects, and things that are thicker than the straw diameter, please pre-exclude to avoid the use of the pipeline.
- If it's found the leaking or high temperature of motor or abnormal sound, such as hot body, abnormal sound, different sputum, weak service, etc., it should be stopped immediately.
- Please check the dust cup regularly. If there is more garbage inside, please clean it up in time and keep the air vents unobstructed to avoid the blockage and cause the force to drop and the motor start the ship so that reducing the service life of the product
- Never leave the appliance unattended when it is switched on. Keep the appliance out of the reach of children or the infirm.
- Do not switch the appliance on if it appears to be faulty in any way.
- Don't disassemble the dust cup, UV light cover and open the air hood when the machine is powered or running to avoid injury or machine damage
- If the adapter is damaged, you need to purchase the original adapter.
- For repairs or accessories. Contact your dealer or an authorized Service Center.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Warning about UV

- This product is equipped with UV light, please avoid to watch the machine bottom when the power and UV function are opened to prevent UV ray from causing harm to human body
- Please don't expose UV ray to animals and plants for avoiding the damage
- Please don't continuously concentrate UV rays in one place which may cause damage to cleaning objects

- When the UV light is opened, the eye cannot directly see it or cannot illuminate human body skin, causing damage to human body.
- If used for a long time, the position of the protective UV light will accumulate dust, causing the UV light to keep on and lose the protection of human body. In this case, please clean dust the surface of the sensor probe with a clean cloth.

 
Operation Instruction

Preparation before Using


- Make sure the product parts are assembled in place.
- Check the power if sufficient to ensure the product work normally.

Charging Instruction

- Insert the adapter into the charging stand and the plug into the power socket.
- Don't turn on power switch when charging.
- The power will be fully charged when three indicator lights are solid.
- **Usually it needs to take about 4.5 hours to fully charge the appliance.**

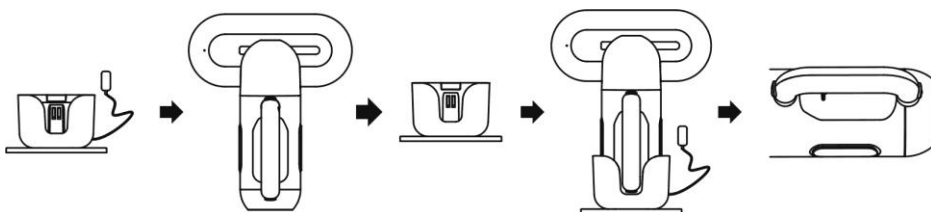

Indicator Light

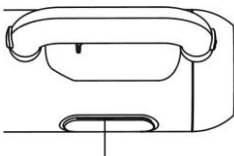 

- 3 lights on 100%
- 2 lights on 65%
- 1 lights on 30%
- 1 light to flash, need to be charged

Attention!!

 
- Put the appliance into the charging stand and the indicator light will flash, now the appliance enters into charging condition.
- Please fully charge the battery when use a new battery or first use after long-term storage.

How to Use

- Press the power switch to start operating, the indicator lights will be on.
- Press again the power switch is to shut down.

UV & Flap Instruction

- UV light operate when press against the surface.
- UV light turn off automatically when leave surface, flap mode will stop at the same time.
- UV light and flapping indicator light is synchronized.

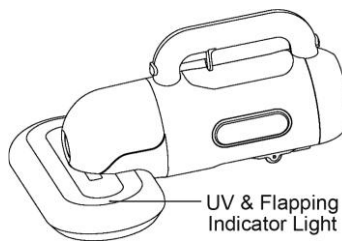



Attention!!

- To avoid the injury for people and pets, UV light is equipped with range sensor safety switch and it will be off when the product leaves the object surface.



Care and Cleaning

- Allow the appliance to cool down before cleaning.
- Never immerse or fully submerge the appliance into water.

  Clean the Dust Cup

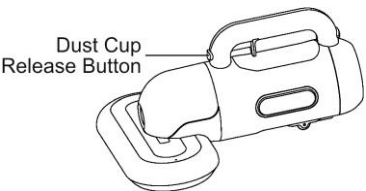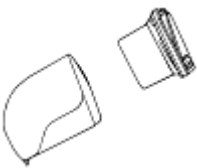 Dust Cup Release Button		
Press the button to release the dust cup.	Separate the dust cup.	Clean the dust cup with the brush.
		
Open the Stainless Steel Micro-Mesh filter in the main clockwise direction.	Clean the Stainless Steel Micro-Mesh filter (washable).	Clean the HEPA filter with brush

  Air Outlet Filter Sponge

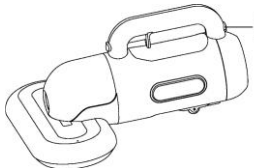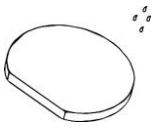 Air Outlet Release Button	
Press the Air Outlet Release Button to open the air outlet.	Take out the filter sponge (washable)

Attention!!

- Please ensure that all washable parts are completely dried before storage.

Daily Storage

- When not using the appliance for a long time, please keep it in a cool and dry place. Don't put in direct sunlight or damp environment.
- When not using the appliance for a long time, please make sure to charge and discharge at least once every three months.

Trouble Shooting

When there is malfunction, please refer to below chart for trouble shooting.

Trouble	Possible Reasons	Solution
Machine not work	Low battery power.	Please charge the battery on time.
	Power switch isn't pressed.	Press the power switch.
Less Suction	Dust cup stainless steel mesh filter or HEPA filter is blocked.	Clean the dust cup, stainless steel micro mesh filter or HEPA filter or change HEPA filter.
	Suction inlet is blocked.	Clean the suction filter.
UV light not work	Object surface is not smooth or the UV light isn't fully touched the object, the range sensor is in protect status.	Keep the surface flat or the UV light fully contact with the cleaned object.
	UV light is damaged.	Charge the UV light
Excessive Noise	Fully of dust cup.	Stop using and clean up the blockage.
	Suction inlet is blocked.	
	Dust cup ,stainless steel micro mesh filter or HEPA filter is blocked.	
	The filter component isn't installed.	Install the filter component

