


TRIO[®] *Ventilateur*


PEDESTAL FAN

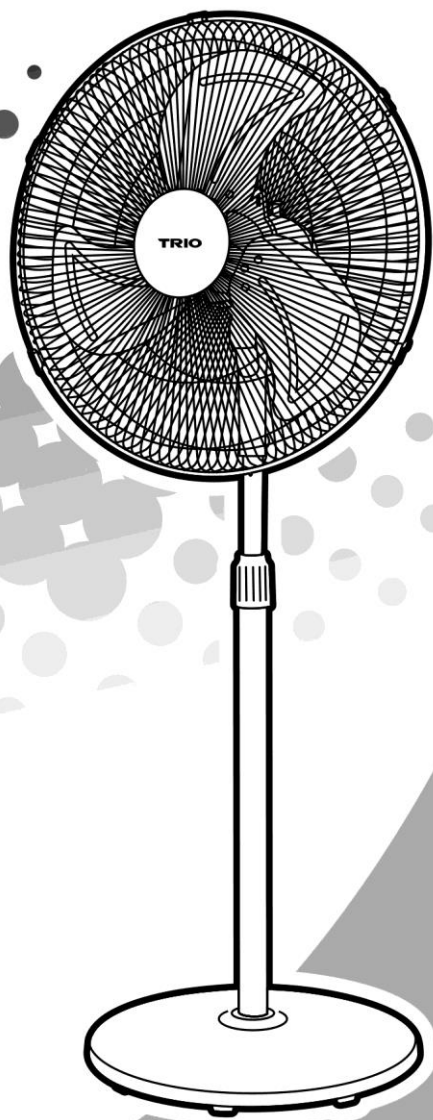

USER MANUAL

TPF-5202A

Parts Identification

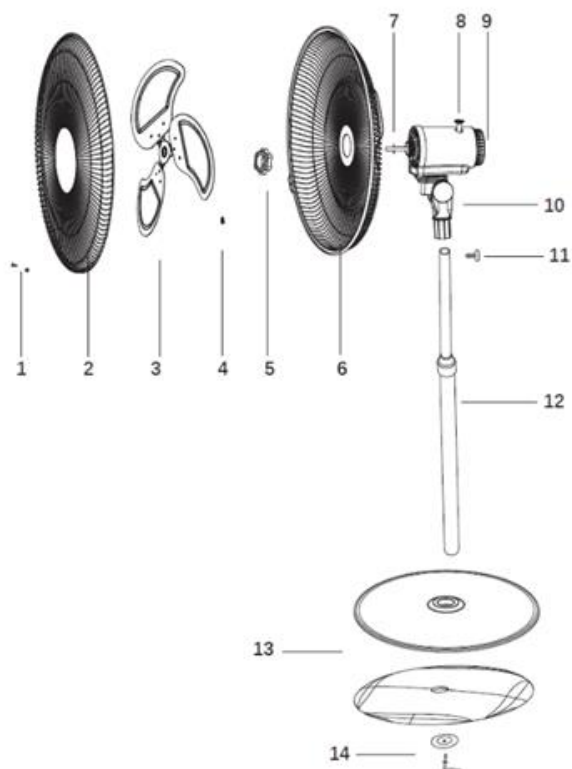

1	Safety screw	8	Oscillation knob
2	Front guard	9	Speed knob
3	Fan blade (Aluminium)	10	Fan Body
4	Fan blade fix screw	11	Fix knob
5	Guard interlocking nut	12	Extension tube
6	Rear guard	13	Base
7	Motor shaft	14	Washer & L type screw

Specifications

Model	TPF-5202A
Rated Voltage	220-240V~
Rated Wattage	80W
Frequency	50Hz
Blade Size	20"(500mm)

General Safety Precautions

1. Read all instructions carefully before using the appliance.
2. Check that the voltage range given on the appliance rating label corresponds with that of your main voltage.
3. Keep children away when appliance is in operation.
4. This appliance is suitable for normal household use only.
5. Operate the appliance only on a level working surface.
6. Do not hold the appliance on the slant while it is still in operation.
7. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged. Return the appliance for examination, adjustments, or repair.
8. The use of attachments not recommended may cause fire, electrical shock, or risk of injury.
9. Never open the cover before the motor has stopped. Never immerse the motor base in water or other liquids; wipe with a damp cloth to clean it.
10. Unplug the unit when not in use and whenever you clean or move the unit.
11. Only authorized service personnel should undertake repairs on electrical appliances. Faultily, unqualified repair work may cause accidents or injury to the user.
12. If the supply cord is damaged, it must be replaced by the manufacturer or authorized service agent in order to avoid a hazard.
13. This appliance cannot be used by physical weak, slow response or mentally disabled people (including children) unless guidance is provided during operation.

How to Assemble the Pedestal Fan

1. Loosen the “L” screw at the bottom of the extension tube.
2. Insert the extension tube firmly into the base unit. Reverse the whole unit and secure the extension tube and base seal board with an L washer screw.
3. Ensure the extension tube is fully locked to the base unit.
4. Insert the fan body into the extension tube and secure it in place by turning the Fix Knob clockwise. Loosen the height adjustment knob to extend the extension tube to the required height, and then lock the knob to tighten.
5. Position the rear guard on the front of the motor housing, making sure the locating pins on the motor housing fit properly into the narrow holes in the rear guard.
6. Tighten the guard interlocking nut by turning it clockwise. **DO NOT OVER TIGHTEN!**
7. Mount the fan blade onto the motor shaft and gently tighten the blade mounting screw with a screwdriver.
8. Place the front guard against the back guard so that the slot in the edges can fit the back guard. Lock the clip on the front guard and fasten the security screw

How to Use the Pedestal Fan

1. Power ON/OFF and speed are controlled by the speed knob.
2. Rotate the speed knob to adjust the fan speed from Low(1) to Medium(2) to High(3).
3. To stop the fans, turn it to the “0” position.
4. To tilt the fan, always ensure that the fan is in off position and wait until the blade has completely stopped for safety reasons. Hold the stand firmly with one hand and move the guard gently upwards or downwards.
5. The oscillation knob is positioned at the top of the rear motor cover. Press the knob down to make the fan oscillate and pull it up to stop oscillation.

6. To adjust the height of fan, always ensure that the fan is in off position and wait until the blade has completely stopped for safety reason. Hold the stand firmly and loosen the height adjust knob, then push up or pull down the extension tube to adjust the height of fan.

Care and Cleaning

- Always ensure that the power supply is off and the power cord unplugged from the power supply. Wait until the blade has completely stopped before cleaning.
- Wipe the exterior surfaces and internal with a damp cloth. Do not flush the whole appliance with water.
- Do not use an abrasive sponge, scouring pads, or stiff brush to clean the appliance. Do not clean with abrasive cleaning agents such as detergent, gasoline, or turpentine.
- For proper storage, always place the fan in a low humidity environment.

