

Installation Guide


5-inch Visible Light Terminal (ZAM210)

Version: 1.0


How to Install the Device?

1. Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
2. Fix the Backplate on the wall using the wall mounting screws.
3. Attach the device to the Backplate.
4. Fasten it with a security screw.


1

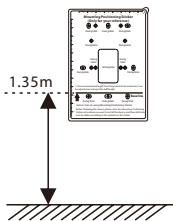


2

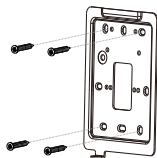


3

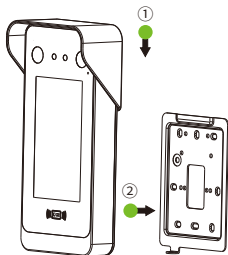

4

 


Terminal Block

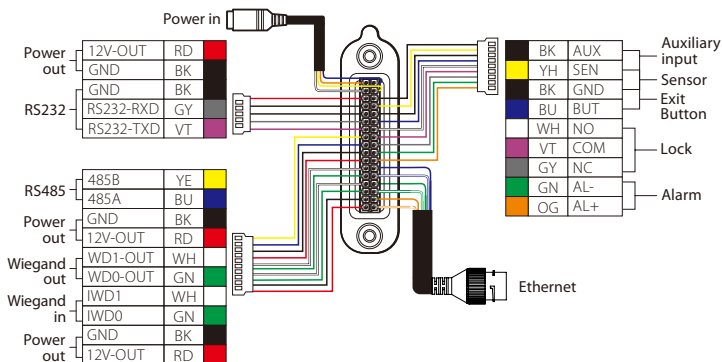

Wiring Diagram


Power Connection:

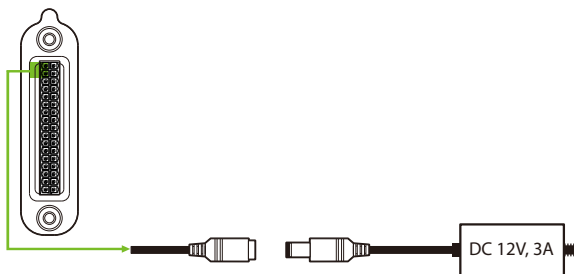

- Recommended AC adapter: 12V, 3A
- To share the power with other devices, user an AC adapter with higher current ratings.


Ethernet Connection:

Connect the device and computer software over an Ethernet cable. As shown in the example below:

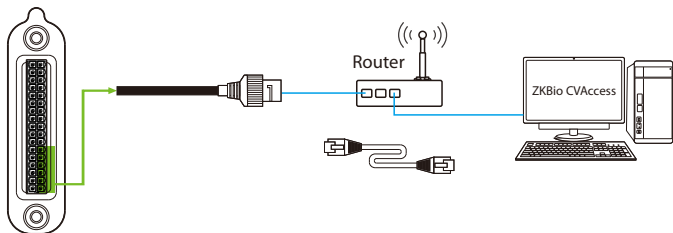

Enter **[COMM.] > [Ethernet]** to set the relevant parameters of network.

Door Sensor, Exit Button & Alarm Connection:

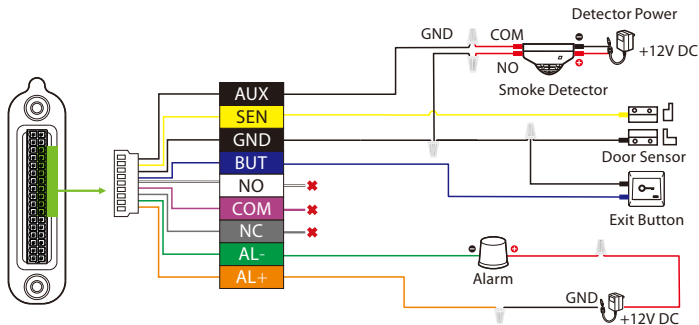


✗ Do not Use


Lock Relay Connection:

The system supports both **Normally Opened Lock** and **Normally Closed Lock**. The **NO Lock** (normally opened when powered) is connected with 'NO1' and 'COM' terminals, and the **NC Lock** (normally closed when powered) is connected with 'NC1' and 'COM' terminals. The power can be shared with the lock or can be used separately for the lock, as shown in the example with NC Lock below:


Device not sharing power with the lock

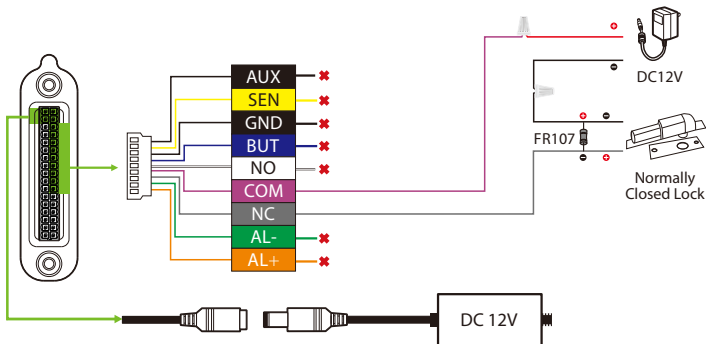


Device sharing power with the lock

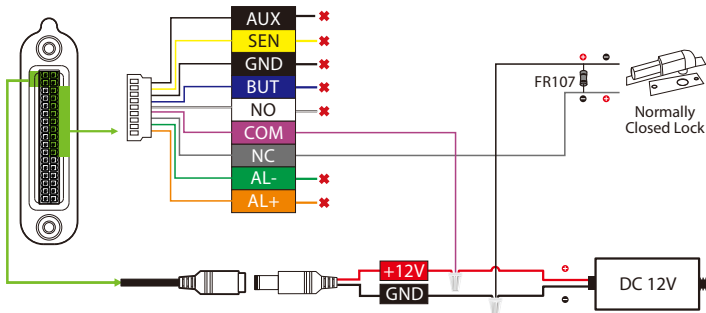

Wiegand Connection:

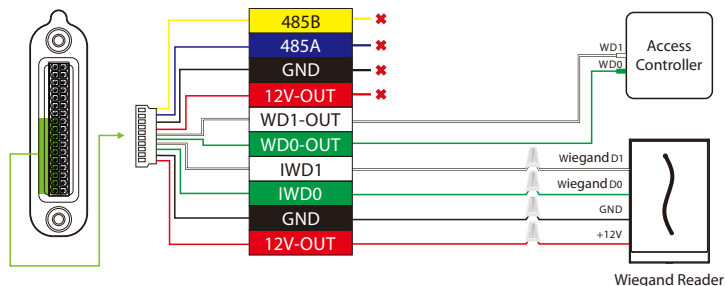

RS485 Connection:

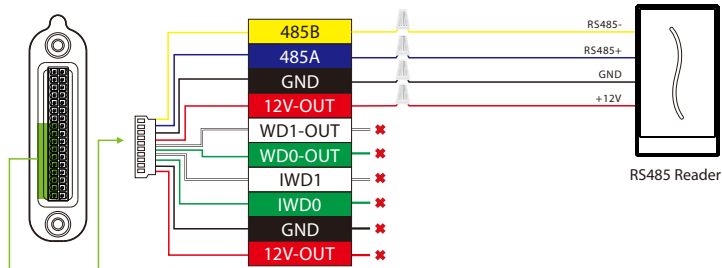

Download Center

Scan the QR Code to download the **User Manual**, **Installation Guide** and **Quick Start Guide**.



QR Code (Download Center)

