

TRIO[®] *Cuisine*

MINI CHOPPER



USER MANUAL


TFC-501

General Safety Precautions

1. Read this instruction manual carefully before using the appliance for the first time. Keep this user manual for future reference.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Do not open until the blades stop.
4. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
5. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
6. Be sure motor unit is locked securely in place before operating appliance.
7. Do not attempt to defeat the cover interlock mechanism.
8. Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
9. This appliance is intended for indoor and household use only; not for outdoor, commercial and industrial use.
10. Keep the appliance and its power cord out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
11. To protect against fire, electric shock and injury, do not immerse power cord, plug or appliance in water or other types of liquid.
12. Ensure the voltage indicated on the Rating Label corresponding to the local power supply.
13. Do not leave the appliance operating unattended for any extended period of time.
14. Always place the appliance on a flat, level and dry surface.

15. The appliance must be switched off and mains plug removed from wall socket each time after use, and before cleaning and maintenance.
16. When overheating occurs, the circuit breaker will be activated and the power will be cut off. The circuit breaker will be activated for normal use again when temperature of electric motor drops to a low temperature.

Parts Identification

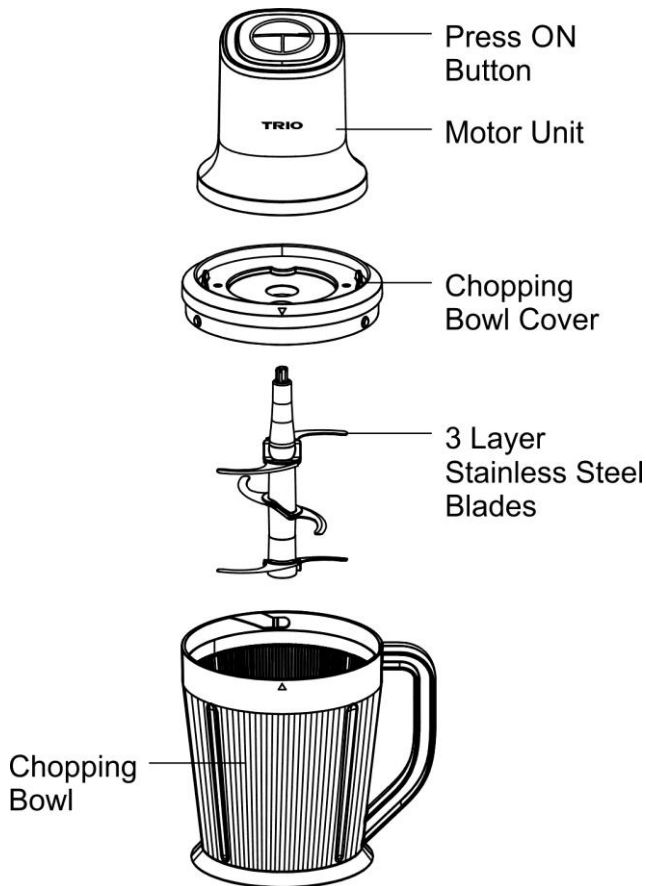

Specification

Model	TFC-501
Rated Voltage	220-240V
Rated Power	500W
Frequency	50-60Hz
Capacity	1.5L

Before The First Use

Before using this appliance for the first time, wash the bowl and blade assembly in sudsy water and dry thoroughly, all of these parts are safe in dishwasher, wipe the motor unit with a damp cloth, do not immerse the motor unit in water.

How to Chop or Mince Food

1. Place the chopping bowl on the flat surface, and then place the 3 layer stainless steel blades down over the shaft in the chopping bowl. Be careful not to touch the chopping blade as it is extremely sharp.

2. Place the food into the chopping bowl.

CAUTION: To avoid damage to the motor unit, do not fill ingredients exceeding the “MAX” mark.

3. Place the chopping bowl cover onto the chopping bowl then position the motor unit onto the bowl, the embossment on the bowl cover is linked up to the hole on the motor unit, lining up the motor unit locking tabs to the bowl locking slots till the motor unit locks.

4. Depress and hold the pulse button to process.

Note: This product has a pulse button. Avoid running the motor continuously beyond 60 seconds. A longer of a continuous pulse is to finer the texture. For coarsely chopped foods, use short pulses.

5. Be sure the chopping blade stops rotating completely before removing the motor unit. Unplug the unit. Remove the motor unit and chopping bowl cover; carefully lift up the chopping blade out. Empty the processed food. Do not use bowl for storing food.

Chopping Guide

	Food Type	Preparation Hints
1.	Bread fresh, toasted or stale	Use 80g (size: 100mm X100mmx10mm) at a time, torn into several pieces. Process 10 seconds on 2 min off until pureed as desired.
2.	Fruits and vegetables	Use up to 150g and process 10 seconds on 2 min off until pureed as desired.
3.	Nuts	Pulse or process up to 100g on 20 seconds off 2min until desired chop is reached.
4.	Cookies, crackers	Pulse or process up to 150g cookies or crackers on 20 seconds off 2min until desired chop is reached.
5.	Meat (Cut into 25mm*25mm*25mm bulk)	Pulse or process up to 150g meat on 10 seconds off 2min until desired chop is reached.
6.	Ice Cube	Repeat pulse or process up to 300g on 5 seconds and off, until desired effect.

Care and Cleaning

- Always unplug the appliance before cleaning.
- The motor unit must only be wiped with a damp cloth. Never place it in a dishwasher, immerse in water or place it under running water.
- The chopping bowl, the chopping blade and the chopping bowl cover can be washed under running water or in the dishwasher.
- Gently wipe the appliance and parts with a dry cloth. Do not use abrasive creams, steel wool or scouring pads. Store it in a dry place.

WARNING: BLADES ARE SHARP. EXERCISE CAUTION WHEN CLEANING.

	This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
---	---

